



Loading Automatically

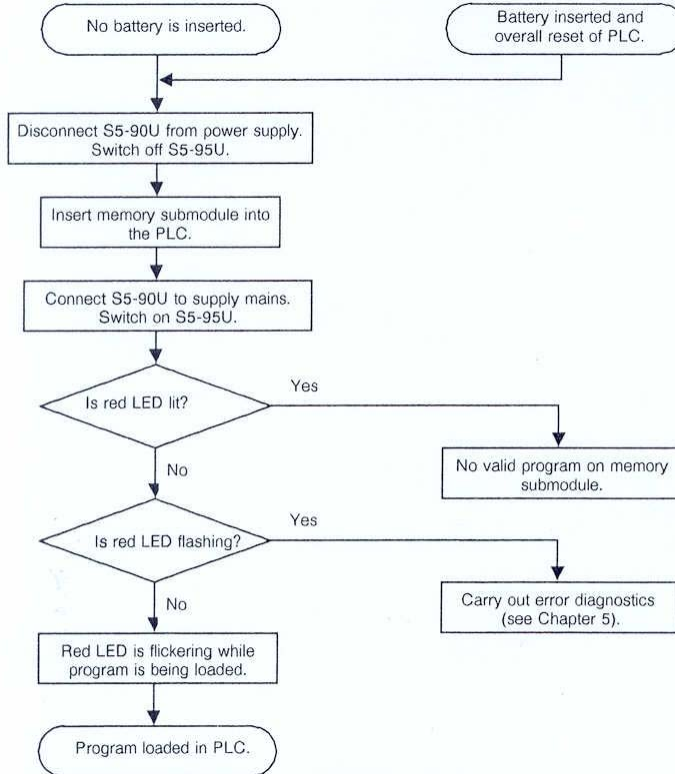

Loading manually

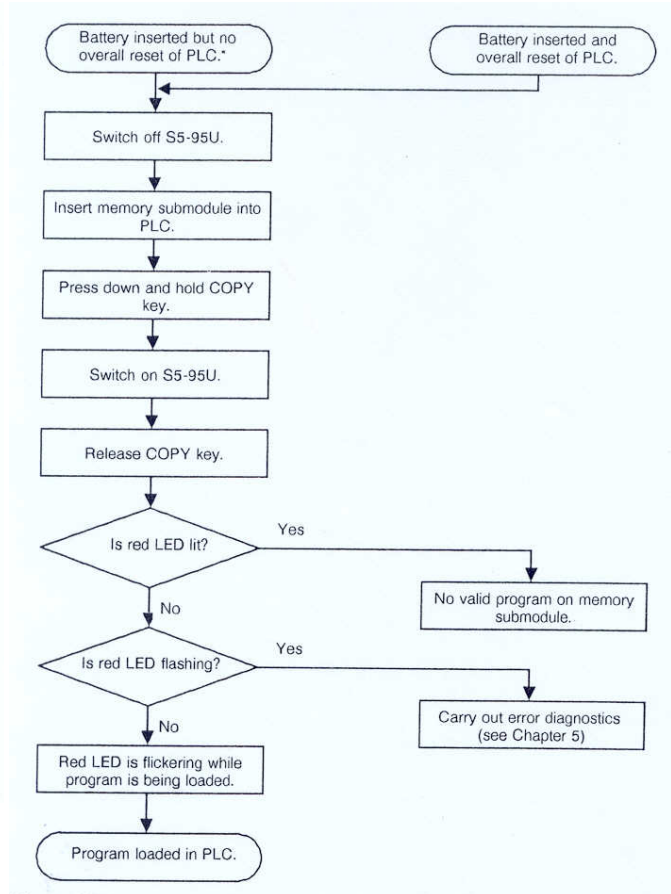

Pic 1 : S5-EPROM



Caution: Only insert the EPROM when the power of the PLC is switched off.